

Jumbo EL Travel Alarm Clock

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Jumbo EL (Electro-Luminescent) Travel Alarm Clock combines a simple design with advanced technology in this easy-to-use alarm clock. Its light weight lets you carry it almost anywhere — pack it in your suitcase or with your camping gear!

The alarm clock's other features include:

Backlight — lets you light the display for about 5 seconds so you can see the time in the dark.

Crescendo Alarm — gradually increases in volume to gently wake you.

Clock Cover — prevents you from accidentally changing the time-setting controls while you carry the clock.

Snooze Control — temporarily silences the alarm for about 8 minutes so you can sleep a little longer.

Built-In Stand — lets you place the clock on a flat surface for easy viewing.

Lock Control — keeps the time and alarm settings from accidentally being changed.

Night Finder — helps you locate the clock in the dark as the display flashes every few seconds.

REMOVING THE BATTERY INSULATION SLIP

Before you can use the alarm clock, you must remove the protective insulation slip from the battery compartment. To remove the slip, grasp its end and gently pull it out.

INSTALLING BATTERIES

Your clock requires two AAA batteries (not supplied) to power the backlight and the alarm. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

1. Slide the battery compartment cover in the direction of the arrow to remove it.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and –) marked inside.
3. Replace the cover.

When the alarm sound becomes weak or distorted or the backlight lights dimly or not at all, replace the AAA batteries. When the battery low indicator appears, replace the button-cell battery. See "Replacing the Button-Cell Battery" on Page 2.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the alarm clock for a month or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

USING THE STAND

To use the control panel cover as a stand, flip the cover under the clock and set it on a level surface (such as a table).

SETTING THE TIME

1. Grasp the cover on either side and lift it up to open it.
2. Set **TIME SET/LOCK/ALARM SET** to **TIME SET**. The time display flashes.
3. Repeatedly press (or hold down) **▲** or **▼** to set the time. The clock scrolls through the time, either forward or backward.

Note: When scrolling through the time, **AM** appears for AM hours, and **PM** appears for PM hours.

4. Release **▲** or **▼** when the clock reaches the desired time.
5. Set **TIME SET/LOCK/ALARM SET** to **LOCK**. The time stops flashing.

USING THE ALARM

Setting the Alarm Time

1. Grasp the cover on either side and lift it up to open it.
2. Set **TIME SET/LOCK/ALARM SET** to **ALARM SET**. The alarm time, located at the top left of the display, flashes.
3. Repeatedly press (or hold down) **▲** or **▼** to set the alarm time. The clock scrolls through the time, either forward or backward.

Note: When scrolling through the time, **AM** appears for AM hours, and **PM** appears for PM hours.

4. Release **▲** or **▼** when the clock reaches the desired time.
5. Set **TIME SET/LOCK/ALARM SET** to **LOCK**. The alarm time stops flashing.

Turning the Alarm On/Off

Set **ALARM/OFF/ON** to **ON** to turn on the alarm. Set **ALARM/OFF/ON** to **OFF** to turn off the alarm. **🔔** appears when the alarm is on.

The alarm sounds for about 1 minute at the set alarm time. After about 1 minute, the alarm automatically turns off, and sounds at the same time the next day. To silence the alarm sooner, set **ALARM/OFF/ON** to **OFF**.

USING SNOOZE

Note: You can only use snooze when the clock is set on its stand.

To silence the alarm for about 8 minutes, gently press down on **🔔 ((SNOOZE)) 🔔** so the clock rocks back on its stand and beeps.

You can press **⌚ ((SNOOZE)) ⌚** repeatedly, but after about one hour, the alarm automatically turns off and sounds again at the preset time the next day.

USING THE BACKLIGHT

Note: You can only use the backlight when the clock is set on its stand.

To light the display for about 5 seconds, gently press down on **⌚ ((SNOOZE)) ⌚** so the clock rocks back on its stand and beeps and the display lights.

You can also press **NIGHT FINDER** (on the back of the clock) so the display flashes every few seconds to help you find it in the dark. **⌚** appears when **NIGHT FINDER** is on. **NIGHT FINDER** automatically shuts off after about 9 hours.

If **NIGHT FINDER** is turned on and the alarm sounds, **NIGHT FINDER** shuts off *after* the alarm cycle stops. The alarm cycle must completely finish. If you silence the alarm *before* it completes its cycle, **NIGHT FINDER** remains on.

Note: You can only use **NIGHT FINDER** in a very dark environment. You may not be able to see the flashing display under normal light conditions.

CARE

To enjoy your RadioShack Jumbo EL Travel Alarm Clock for a long time:

- Keep the clock dry. If it gets wet, wipe it dry immediately.
- Use and store the clock only in normal temperature environments.
- Handle the clock gently and carefully. Do not drop it.
- Keep the clock away from dust and dirt.
- Wipe the clock with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty. If your clock is not performing as it should, take it to your local RadioShack store for assistance.

REPLACING THE BUTTON-CELL BATTERY


Your clock comes with one 357A button-cell battery to power the clock. When the low battery indicator appears, replace the button-cell battery. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Warnings:

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: Use only a fresh battery of the required size and recommended type.

Follow these steps to replace the button-cell battery.

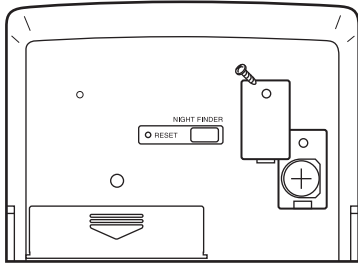

1. Use a Phillips screwdriver to loosen the screw on the button-cell battery compartment.
2. Lift off the cover.
3. Remove the old battery and replace it with a new one, positive (+) side up.
4. Replace the cover and secure it with its screw.

RESETTING THE CLOCK

To reset the clock, use a pointed object (such as a straightened paper clip) to press **RESET** on the back of the clock. The default time is set to **12:00 PM** and the alarm is set to **6:00 AM**. Reset the time and alarm, as necessary.

SPECIFICATIONS

Power Requirements	One 357A button-cell battery 2 AAA batteries
Accuracy	±0.67 second/day
Battery Life	A76 battery, 6 months 2 AAA batteries, 10 months
Dimensions (HWD)	3 ¹ / ₁₆ × 4 ³ / ₁₆ × 5 ⁵ / ₈ in (78 × 107 × 16 mm)
Weight	3.2 oz (90 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations,
200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99